

E-Z BORE INC.

400 F Commerce Circle
Yorktown, VA. 23693
www.ezbore.net
757-898-5645



Note: Washer and bearing sequence as shown in photo. One washer should contact inner race of hub bearing and then side load bearing, followed by last washer.

Install bearing set on the inside of hub assembly (set contains 1-bearing and 2-washers) install hub assembly and put second bearing set on the outside of hub assembly.

After installing bearing sets it will be necessary to remove a $\frac{3}{4}$ " spacer on each spindle in order for castle nut to have needed clearance to install retaining clip.

Adjust bearing tension by tightening castle nut until contact with light pressure and then turn counterclockwise $\frac{1}{8}$ turn and install retaining clip.

Please feel free to contact us with any question you may have about installation at (757) 898-5645 or ezbore.net

Thank You! Very Much for Your Purchase!